

HEATING JACKET OR VEST INSTRUCTION MANUAL

ALLPURPOSE HEATED CLOTHING AUSTRALIA  N28874

TARGET USERS:

Frequent outdoor workers:

Construction, environmental protection, builders, drivers, warehouse workers, refrigeration and many more.

Sports:

Football, fishing, golf, riding, skiing, hockey, soccer, hiking, mountaineering, photography, spectators, various sporting events and many more applications.


General:

Students, commuters, travelers, motor bike riding, etc

Health:

Elderly people or people with mobility problems that need to keep their body and certain parts of their body warm.

People, patients or workers with bad blood circulation.

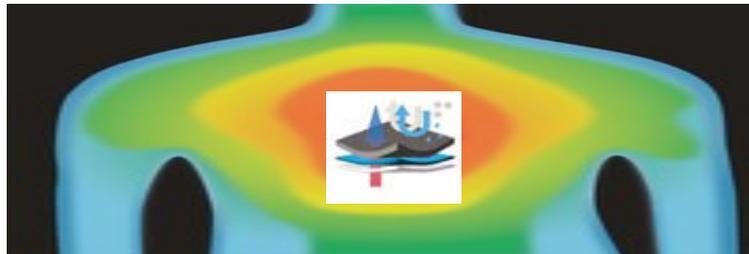

Allpurpose Heated Clothing Australia
P.O.Box 38, Woodcroft
South Australia 5162
0435 715651



www.allpurposeheatedclothing.com.au

HEATING JACKET OR VEST INSTRUCTION MANUAL

ALLPURPOSE HEATED CLOTHING AUSTRALIA

IMPORTANT INSTRUCTIONS:

Read all instructions before using this product.

Always keep batteries out of reach of children.

This product is washable.

Before washing the product, please remove batteries.

Batteries are rechargeable.

Always charge them only with the charger provided.

The battery can only be charged by the range of 100V - 240V, 50 or 60Hz, AC Current.

If you are using the Vest or Jacket without the battery connected, please remove the battery to avoid draining the battery of power.

SERVICE INSTRUCTIONS:

Do not attempt to repair or adjust any electrical or mechanical functions on the Heated Vest or Jacket. **Doing this will void Warranty.**

OPERATION INSTRUCTIONS:

How to charge your battery:

Charge your battery before using.

Insert the plug into the battery as shown in the below drawing.



Plug your charger into the electric outlet with the electricity range of 100V - 240V, 50 or 60Hz, AC Current.

The charger indicator will be on red when charging and will be on green when completely charged.

The **FIRST TIME** full charge will take approximately 8 hours and there after will take approximately 4 hours.



www.allpurposeheatedclothing.com.au


HEATING JACKET OR VEST INSTRUCTION MANUAL

ALLPURPOSE HEATED CLOTHING AUSTRALIA

HOW TO HEAT UP THE VEST OR JACKET:

Insert the plug (inside the Vest or Jacket inner small pockets) into the battery as shown in drawing below. Put the battery into the small pocket inside Vest or Jackets

1. Led Flashlight
2. on Switch / Increase temp. Level
3. Heat level indicator
4. off Switch / Decrease temp. Level
5. Power plug inlet and Plug fixturing

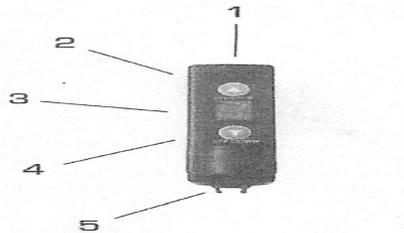

Press the ON/OFF key for 3 seconds, the number 2 on the temperature controller will be displayed. This is the default setting when switching the battery heat on. The temperature can be increased / decreased by pressing the up / down button.

You may choose from 5 heat level settings, 1 (low) to 5 (high) depending on heat required. Hold down the On/Off key for 3 seconds to switch off the battery pack. It takes approximately 5 minutes to feel the heat.

The approximate values of the heat levels are:

1 = 40degreesC, 2 = 45DegreesC, 3 = 50DegreesC, 4 = 55DegreesC, 5 = 60DegreesC
The heating element will maintain a temperature range from 40DegCelcius to 60DegCelcius.

The battery will keep on working for up to 7 hours before it needs to be recharged. The battery will show an indicator from 0 - 9 (flashing) to show the status of the battery charge and at what level of charge the battery has left. 0 (represents low charge) to 9 (represents fully charged) When charging the battery pack it will also indicate the charging state and decimal point will flash with the level of charge available. The length of the battery's life will vary according to the outside temperature and whether the Vest or Jacket is worn under another garment. The battery may probably only be charged up to 450 times and then may need replacing.



www.allpurposeheatedclothing.com.au

HEATING JACKET OR VEST INSTRUCTION MANUAL

ALLPURPOSE HEATED CLOTHING AUSTRALIA

OPERATION METHOD OF THE ELECTRIC TORCH:

Please do not look at the light directly.

ON: Press the ON/OFF key for 1 second.

OFF: Press the ON/OFF key for 1 second.

HOW TO WASH THE VEST OR JACKET:

This Vest or Jacket can be hand washed.

Before washing, **YOU MUST REMOVE THE BATTERY PACK** inside the Vest or Jacket and cover the DC plug with the waterproof cover connected to the DC plug.

Do not bleach and wrench these garments when washing

Hang dry (do not dry garments I air dryer)



www.allpurposeheatedclothing.com.au